

MoonBase for iPad

Assembly Instructions



MoonBase

1



Unlock the iPad enclosure by inserting key into security lock and rotate 'QUARTER TURN ONLY' clockwise or counter-clockwise through 90 degrees which releases the locking pin. Return key back to original position to remove.

If you are not using cable management for charging, please proceed to stage 3.

2

Feed charge/sync cable through central holes in unit, so it protrudes from the enclosure and base.



3




If applicable, plug charge/sync cable into tablet. Place tablet inside enclosure ensuring it is centrally positioned within the relevant corner mouldings.

4



Replace fascia and depress lock button to secure enclosure.

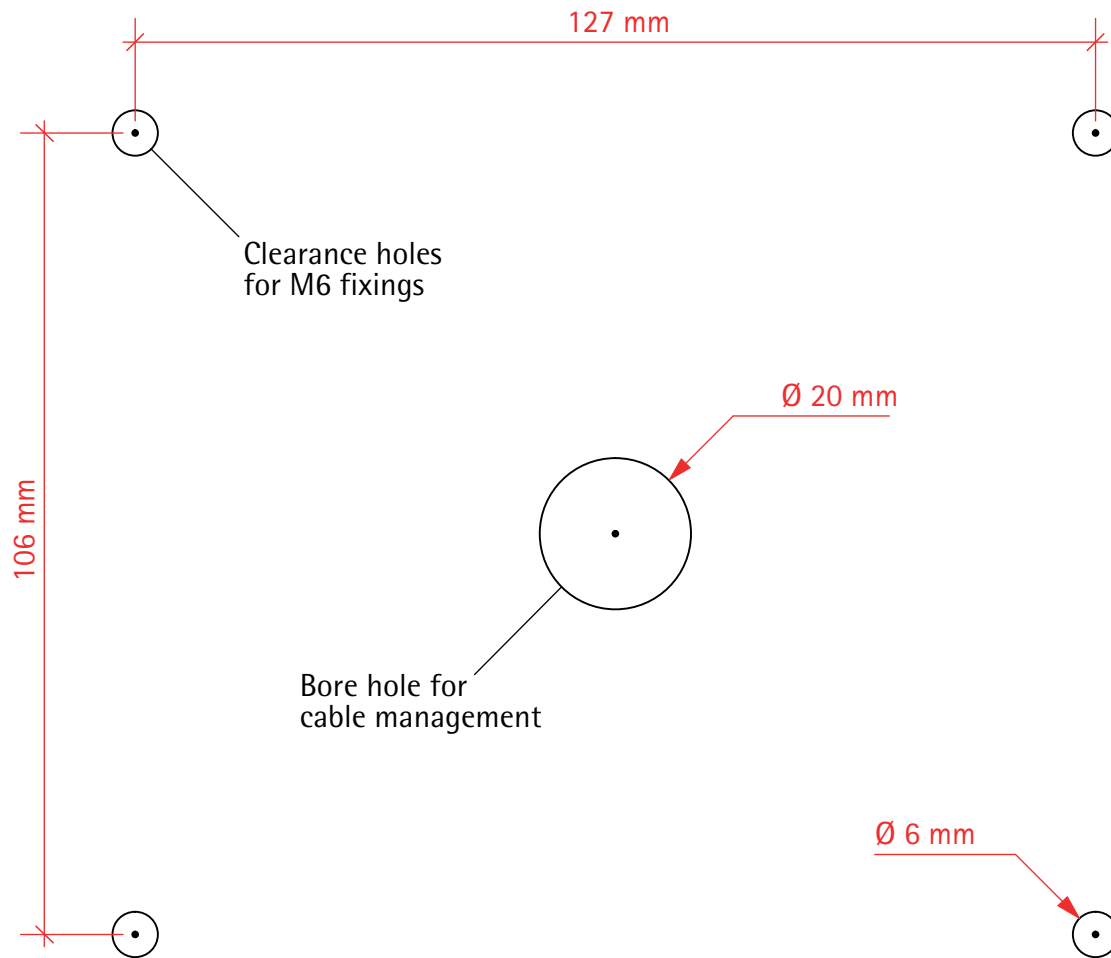

Template for optional screw mounting