


SlimLine Change Booth Frame - Instructions:

1. Remove all the poles from the pole bag.
2. Connect all the poles to their full length. You will have 4 U shaped side bars (D), 2 (longest bars) back support bars (A), 2 shorter front support bars (these have the smaller aluminium connectors sticking out the ends (C), 2 back bars (these have the two black connectors riveted to them.) (B) and one Black curtain rail(E).
3. join two U shaped side bars with one back bar. (create 2 "C" shape frames) (D+B+D)
4. On one of the new "C" shaped frames add the two front support bars (C)to the open ends.
5. Leaving the "C" Shape on the floor lift up the front support bars 90 degrees from the frame.
6. Walk the support bars forward rotating over the back bar. Rest the ends of the front supports on the floor whilst the Back bar is still on the floor.
7. Join the second "C" shape to the ends of the Front supports by lifting up one front support horizontally to the ground at a time and joining it to an open end of the second "C" shape, ensuring the Black joiners on the back bar are facing in towards each other.
8. Add the two back support bars (A)between the black joiners at the base of each "C" frame.

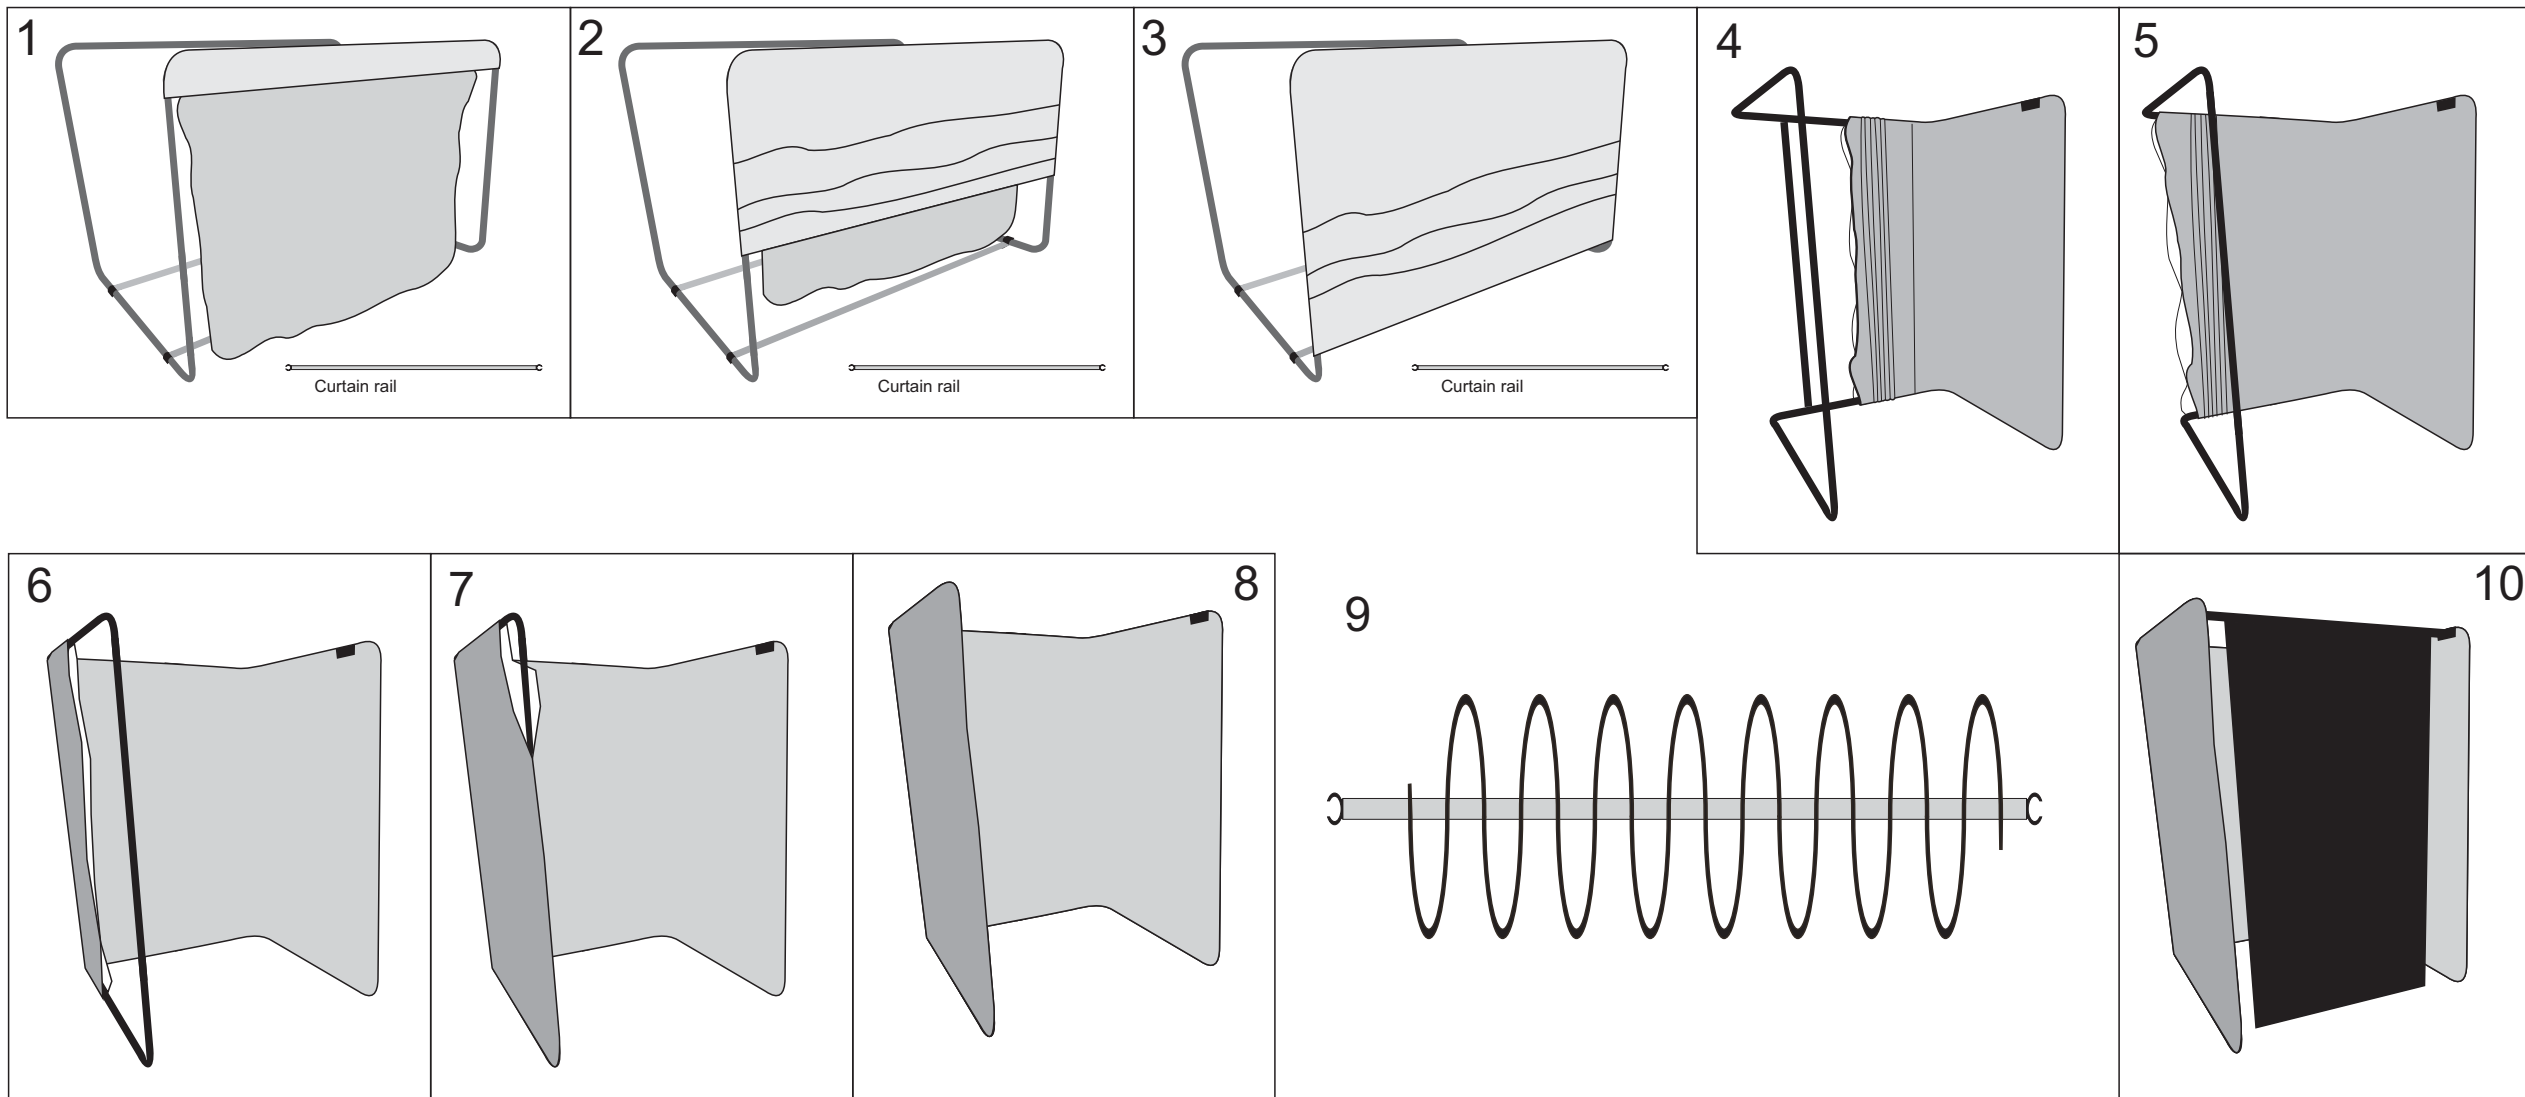

SlimLine Change Booth Fabric - Instructions:

1. Leaving the frame on its back. Grab the cover and open the zip. Place both ends of the opening over the frame and pull down a bit. Ensure you put the correct artwork facing the correct way. On one side of the zip there will be a small square cut in the fabric, this will face inside
Always work a bit on one side and then a bit on the other, pull around some of the fabric on one edge and then a bit on the other edge.

Do not try pull all on one side before moving to the other side.

2&3 Pull the zip down evenly all the way to the bottom of the one side until the fabric is all the way onto the frame and line the seam with the frame.

4. Stand the frame up carefully with out dragging it across the floor. Now slide the cover around the corner again bit by bit

5&6 Keep sliding the fabric around the frame until it is stretched nice and evenly around the complete frame.

7&8 Pull the zip up from the bottom to the top. If need be you can adjust the fabric for a more even fit

9. Slide the curtain rail through the curtain rings as per diagram 9

10. Hook the ends of the curtain rail into the two openings on the top front left and right of the unit. Face the hems inside. Now you are ready to change.